



HORIPAD Turbo

for Nintendo Switch™ 2 / PC

Instruction Manual

Thank you for purchasing this product.

Before using this product, please read the instructions carefully.

After reading the instruction manual, please keep it for reference.

* Make sure that your Nintendo Switch™ 2 is updated with the latest system software.

* This controller works only in TV Mode.

* This product does not support the following features:

- Gyroscope
- Accelerometer
- IR Motion Camera
- Player LED
- HD Rumble
- HOME Button Notification LED
- NFC

Caution



 
Caution

Parents / Guardians:

Please read the following information carefully.

- This product contains small parts. Keep away from children under 3 years old.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Long cord. Strangulation hazard.
- Keep the product away from dusty or humid areas.
- Do not use this product if it has been damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
- Do not apply strong impact or weight on the product.
- Do not pull roughly or bend the cable of the product.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.
- Do not use this product with a USB hub. The product may not function properly.

Contents

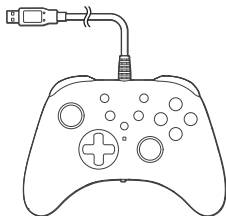

Controller × 1



Instruction Manual × 1

Compatibility

Nintendo Switch™ 2, Nintendo Switch™ Nintendo Switch™ – OLED Model

Important


Please be sure to read the instruction manual for the Nintendo Switch™ 2 before using the product with the Nintendo Switch™ 2. Make sure that your Nintendo Switch™ 2 is updated with the latest system software.

* An internet connection is required to update the Nintendo Switch™ 2 to the latest system software.

PC


Supported OS	Windows 10 / 11	
Input Method	XInput	✓
	DirectInput	✗
System Requirements	USB-A Port	

 Layout and Features

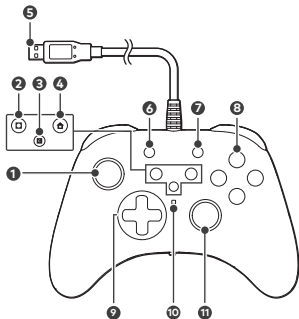

- ❶ Left Analog Stick
(LSB Button)
- ❷ Capture Button
PC : N/A
- ❸ C Button
- ❹ HOME Button
PC : GUIDE Button
- ❺ USB Connector

 - ❻ - Button
PC : BACK Button
- ❼ + Button
PC : START Button
- ❽ A / B / X / Y Button
- ❾ Directional Pad
(Up/Down/Left/Right)
- ❿ Function LED
- ⓫ Right Analog Stick
(RSB Button)

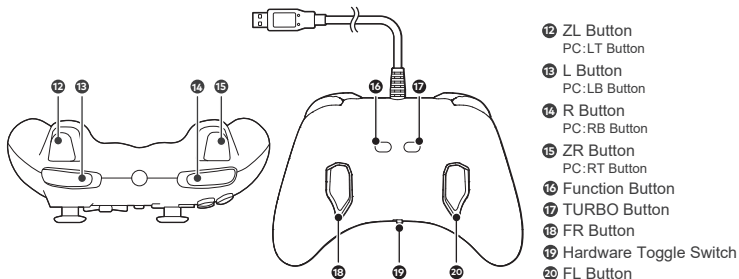

How to Connect

- 1** Set the toggle switches to the appropriate setting (see below).

Hardware Toggle Switch

 
Set based on hardware.




Nintendo Switch™ 2



PC

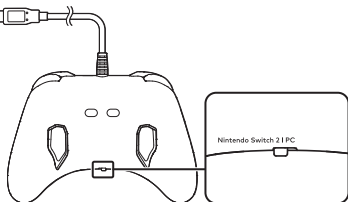

 - 2** Connect the USB cable to your Nintendo Switch 2™ or PC.



Turbo / Turbo Hold Mode

Turbo can be set to 3 different speeds.

 
The following buttons can be set to Turbo or Turbo Hold Mode

A Button / B Button / X Button / Y Button / L Button / R Button / ZL Button / ZR Button /
LSB / RSB / Directional Pad (UP / DOWN / LEFT / RIGHT)*

*Directional Pad (UP / DOWN / LEFT / RIGHT) is not compatible with the Turbo hold Mode, and can only be used to set Turbo Mode.


Turbo Mode

Turbo will be activated while the button is pressed.

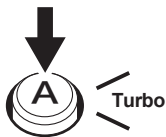

Turbo Hold Mode

 Continuously activates the button function without pressing the button.

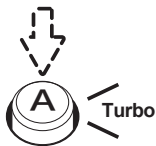

Function LED

Setting up Turbo function



Function LED will turn on.



Turbo function activated

Function LED will flash.*

* The Function LED will flash at a rate corresponding to the Turbo speed.

How to set up Turbo Function

① Turbo ON



While pressing
TURBO Button

+



The button that you
want to set to
Turbo Mode

② Turbo Hold ON



While pressing
TURBO Button

+



Button pressed
in ①

③ Turbo OFF



While pressing
TURBO Button

+



Button pressed
in ②

Turbo OFF (All buttons)



While pressing
TURBO Button

+



HOME Button

 
* The Function LED lights up yellow when Turbo/Turbo Hold and Assign Mode are set at the same time.

* The Function LED will flash at a rate corresponding to the Turbo speed.

How to change Turbo Speed

Turbo Mode can be set to 3 different speeds.

5 times/second → **10** times/second → **20** times/second
← ←

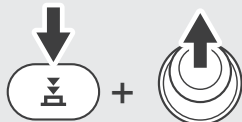

While pressing
TURBO Button

Right Stick

**Increase the speed
by one level**



While pressing
TURBO Button

Right Stick

**Decrease the speed
by one level**

* Turbo speed is set to 10 times/second by default.

* Analog Sticks must be returned to the neutral position before changing to the next turbo speed.

ASSIGN Mode








You can remap the function of buttons using this feature.

Programmable buttons

A Button / B Button / X Button / Y Button / Directional Pad (Up / Down / Left / Right) / L Button / R Button / ZL Button / ZR Button / LSB / RSB / FL Button / FR Button

Assignable Functions

A Button / B Button / X Button / Y Button / Directional Pad (Up / Down / Left / Right) / L Button / R Button / ZL Button / ZR Button / LSB / RSB / + Button / - Button / NC (Button Function Disabled)

	Operation	LED Status	Setting Status
①	 Hold Function button for 3 seconds	 Function LED will flash slowly	Start setting *Button inputs are disabled during setting.
②	 Push the button you want to assign	 Function LED will flash quickly	
③	 Push desired Assignable Function	 Function LED is on	Finish setting  If you want to assign NC (Button Function Disabled): Hold - Button for 3 seconds.



How to Reset buttons Individually

For step ③, press the same button from step ② to individually reset buttons to default.



Return all Buttons to Default

Press the HOME button in step ② to clear all the assignments. (Function LED will turn off.)











* When the Function LED turns on, it indicates that a button is remapped and will stay until button function is reset to default.

* The Function LED lights up yellow when Turbo/Turbo Hold and Assign Mode are set at the same time.

* If you do not perform step ② after ①, the Function LED will turn off after four seconds and assignment mode will automatically end.

Adjustable Dead Zone

The dead zone of the left or right stick can be adjusted to 3 levels.

	Operation	LED Status	Setting Status
①	 Hold Function button for 3 seconds	 Function LED will flash slowly	Start setting *Button inputs are disabled during setting.
②	 or  Tilt the Left Analog Stick / Right Analog Stick up or down.	Wide  Function LED  3 Blinks	Dead Zone level 3
		Function LED  2 Blinks	Dead Zone level 2
		Narrow Function LED  1 Blink	Dead Zone level 1
③	 Push Function button	 Off	Finish setting

* Analog Stick must be returned to the neutral position each time before changing to the next Dead Zone level.

Specifications

Controller

External Dimensions : W 6.1 × D 2.5 × H 4.3 in / W 15.5 × D 6.3 × H 11 cm

Weight : 0.54 lbs / 246 g

Cable Length : 9.8 ft / 3 m

Connection Type : USB-A

Actual product may differ from image.

The manufacturer reserves the right to change the product design or specifications without notice.

HORI & HORI logo are registered trademarks of HORI.

All other trademarks are the property of their respective owners.

©Nintendo. Nintendo Switch is a trademark of Nintendo.