

Software Compatibility

Nintendo Switch Software Compatibility		
Software Title	Compatibility	Notes
Mario Kart World	✓	<ul style="list-style-type: none"> · For grinder operation via the left stick, set the D-pad to left stick mode. · For camera rotation via the right stick, set the D-pad to right stick mode.
Mario Kart 8 DLX	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: A button or right stick up" and "Brake: B button or right stick down". If you want to use the pedals, you need to change them in ASSIGN.
Mario Kart Live: Home Circuit	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: A button" and "Brake: B button". If you want to use the pedals, you need to change them in ASSIGN.
Sonic Racing: CrossWorlds	✓	
Sonic Racing	✓	<ul style="list-style-type: none"> · The game default operation is "Accelerator: R button or ZR button" and "Brake: L button or ZL button". If you want to use the pedals, you need to change them in ASSIGN.
Chocobo Grand Prix	✓	
PAW Patrol: Grand Prix	✓	<ul style="list-style-type: none"> · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.

Lego 2K Drive	✓	· The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in ASSIGN.
Cars 3	✓	· The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in ASSIGN.
Crash Team Racing	✓	· The game default operation is "Accelerator: B button". If you want to use the pedals, you need to change them in ASSIGN.
Dream Works All-Star Kart Racing	✓	· The game default operation is "Accelerator: R button or ZR button". If you want to use the pedals, you need to change them in ASSIGN.
Driving School Simulator	✓	· The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in the ASSIGN menu. · The game default operation is "Shift UP: Y button" and "Shift DOWN: B button". If you want to use the paddles, you need to change them in the ASSIGN menu. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Expeditions A Mudrunner Game	✓	· The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in ASSIGN. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
GRIP: Combat Racing	✓	· The game default operation is "Accelerator: R button or ZR button" and "Brake: L button or ZL button". If you want to use the pedals, you need to change them in ASSIGN.
GRID Autosport	✓	· The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in the ASSIGN menu. · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you need to change them in the ASSIGN menu.
Gear Club Unlimited	✓	· The game default operation is "Accelerator: R button or ZR button" and "Brake: L button or ZL button". If you want to use the pedals, you need to change them in ASSIGN.

Gear Club Unlimited 2	✓	<ul style="list-style-type: none"> · The game default operation is "Accelerator: R button or ZR button" and "Brake: L button or ZL button". If you want to use the pedals, you need to change them in ASSIGN.
Hot Lap Racing	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in the ASSIGN menu. · The game default operation is "Shift UP: A button" and "Shift DOWN: B button". If you want to use the paddles, you need to change them in the ASSIGN menu. · To control the viewpoint, it is necessary to change the Directional Pad settings to the Right or Left Stick.
Hot Wheels Unleashed™ 2 Turbo Charged	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in the ASSIGN menu. · To control the viewpoint, it is necessary to change the Directional Pad settings to the Right or Left Stick. · When performing actions in midair, you need to switch the D-pad to either the right stick or the left stick.
Hot Wheels Unleashed	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in the ASSIGN menu. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick. · To perform aerial controls (right-stick actions), you need to switch the D-pad to the right stick.
Monster Jam™ Showdown	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: ZR button" and "Brake: ZL button". If you want to use the pedals, you need to change them in the ASSIGN menu. · To control the rear steering, it is necessary to change the Directional Pad settings to the Right or Left Stick.
Need for Speed: Hot Pursuit Remastered	✓	<ul style="list-style-type: none"> · The game default operation is "Accelerator: R button or ZR button" and "Brake: L button or ZL button". If you want to use the pedals, you need to change them in the ASSIGN menu. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Spintires: MudRunner American Wilds	✓	<ul style="list-style-type: none"> · The game default operation is "Accelerator: R button or ZR button" and "Brake: L button or ZL button". If you want to use the pedals, you need to change them in the ASSIGN menu. · To rotate the camera (right stick operation), the cross key must be switched to the right stick. · To zoom the camera (left stick up/down operation), the cross key must be switched to the left stick.
Table Top Racing Nitro Edition	✓	<ul style="list-style-type: none"> · The game default controls are "accelerator: right stick up" and "brake: right stick down". If you want to use the pedals, you need to change them in ASSIGN.
WRC9	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: ZR button" and "Brake: ZL button", so if you want to use the pedals, you need to change them in the ASSIGN menu. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick. · The default operation of the game is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you need to change them in ASSIGN.

WRC10	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: ZR button" and "Brake: ZL button", so if you want to use the pedals, you need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick. · The default operation of the game is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you need to change the buttons.
WRC Generations	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: ZR button" and "Brake: ZL button", so if you want to use the pedals, you need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick. · The default operation of the game is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you need to change the buttons.
Wreckfest	✓	<ul style="list-style-type: none"> · The game default controls are "Accelerator: ZR button" and "Brake: ZL button", so if you want to use the pedals, you need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick. · The default operation of the game is "Shift UP: A button" and "Shift DOWN: X button". If you want to use the paddles, you need to change the buttons.
Asphalt 9: Legends	✓	<ul style="list-style-type: none"> · The default commands are "Accelerator: ZR button" and "Brake: ZL button". To use the pedals, you need to change them in the ASSIGN menu. · The recommended settings will make it easier to play the game. Please refer to the user's manual for the setting method. -Dead Zone adjustment: Dead zone value 1 / Green LED -Linearity adjustment: Linearity value 2 / Yellow LED -Sensitivity adjustment: 180 degree setting

* Nintendo Switch and the Nintendo Switch logo are trademarks of Nintendo. All other trademarks are the property of their respective owners.

PC Software Compatibility		Playable with software that supports the API XInput gamepad for Microsoft Windows.	
Software Title	Compatibility	Platform	Notes
Tokyo Xtreme Racer	✓	Steam	<ul style="list-style-type: none"> · When moving the in-game cursor, you need to switch the D-pad to the left analog stick. · To operate the camera and perform scrolling operations (right analog stick operation), you need to switch the D-pad to the right analog stick.
Sonic Racing: CrossWorlds	✓	Steam	<ul style="list-style-type: none"> · Since the default controls are "Accelerate: A button" and "Brake: B button," button reassignment is required to use pedals.
Assetto Corsa	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick. The menu cannot be operated with the controller.
Assetto Corsa Competizione	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.

Asseto Corsa EVO	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: A button" and "Shift DOWN: X button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
BeamNG.drive	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
CarX Drift Racing Online	✓	Steam	
CarX Street	✓	Steam	<ul style="list-style-type: none"> · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick. · To move the map cursor (Left Analog Stick), the D-pad must be assigned to the Left Analog Stick. · Cannot operate the circular menu with the controller.
DiRT 5	✓	Steam /XBOX	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
DiRT Rally2.0	✓	Steam /XBOX	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
EA Sports WRC	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Expeditions: A MudRunner Game	✓	Steam	<ul style="list-style-type: none"> · To select gear, you need to switch the D-pad to the right stick. · To control the viewpoint, it is necessary to change the Directional Pad settings to the Right or Left Stick.
F1 2018	✓	XBOX	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.

F1 2019	✓	XBOX	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
F1 2020	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
F1 2021	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
F1 2022	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
F1 2024	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
F1 2025	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: A button" and "Shift DOWN: X button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Forza Motorsports 7	✓	Xbox	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Forza Horizon 4	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Forza Horizon 5	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.

Farming Simulator 25	✓	Steam	<ul style="list-style-type: none"> · To enable walking with the left stick, set the D-pad to left stick mode. · To enable camera rotation with the right stick, set the D-pad to right stick mode.
Fernbus Simulator	✓	Steam	<ul style="list-style-type: none"> · To enable walking with the left stick, set the D-pad to left stick mode. · To enable camera rotation with the right stick, set the D-pad to right stick mode.
GRID	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
GRID Legends	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Hot Wheels Unleashed™ 2 Turbo Charged	✓	Steam	<ul style="list-style-type: none"> · Assign the D-pad functions to the Right/Left Analog Stick to use the Camera when you perform in mid-air.
Monster Jam™ Showdown	✓	Steam	<ul style="list-style-type: none"> · Assign the D-pad functions to the Left Analog Stick to perform mid-air actions in-game. · To control the rear steering (Right Stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
NASCAR 21: Ignition	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
NASCAR Heat 5	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Need For Speed Heat	✓	Steam	<ul style="list-style-type: none"> · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.

Need for Speed Payback	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Overpass 2	✓	Steam	<ul style="list-style-type: none"> · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Project Cars 2	✓	Steam	<ul style="list-style-type: none"> · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Project Cars 3	✓	Steam	<ul style="list-style-type: none"> · The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
PaperDrive	✓	EPIC	<ul style="list-style-type: none"> · Connection alone does not enable use. Gear shift buttons must be configured
RoadCraft	✓	Steam	<ul style="list-style-type: none"> · To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
SnowRunner	✓	Steam/X BOX	<ul style="list-style-type: none"> · The game's default controls are "Shift Up: A Button", "Shift Down: X Button". Therefore, if you want to use the paddle shifters, you need to change the button settings. · To perform view operations (right analog stick operation), you need to switch the D-pad to the right analog stick.
SnowRunner	✓	Xbox	<ul style="list-style-type: none"> The game default operation is "Shift UP: A button" and "Shift DOWN: X button". If you want to use the paddles, you will need to change the buttons. To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
The Crew 2	✓	Steam	<ul style="list-style-type: none"> To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.

Taxi Life:A City Driving Simulator	✓	Steam	Assign the D-pad functions to the Right Analog Stick to use the menu and camera. When moving the cursor on the map and operating the camera, you will have to assign the directional button function to the left analog stick.
Test Drive Unlimited: Solar Crown	✓	Steam	The game default operation is "Shift UP: A button" and "Shift DOWN: X button". If you want to use the paddles, you will need to change the buttons. To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Truck & Logistics Simulator	✓	Steam	Please assign the button functions to the paddles to operate.
WRC 9	✓	Steam	The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
WRC 10	✓	Steam	The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Wreckfest	✓	Steam	The game default operation is "Shift UP: B button" and "Shift DOWN: Y button". If you want to use the paddles, you will need to change the buttons. To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.
Wreckfest	✗	XBOX	Not compatible
Wreckfest 2	✓	Steam	To control the viewpoint (right stick operation), it is necessary to change the Directional Pad settings to the Right Stick.

* Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X|S, Xbox One, Windows are trademarks of the Microsoft group of companies.

* All other trademarks are the property of their respective owners.