EN

Instruction Manual

Thank you for purchasing this product.
Before use, please read the instruction manual carefully.
After reading, please keep the manual for reference.

*This product is not a controller.

Table of Contents

- Caution ····· 2
- Contents ····· 3
- Layout and Features ····· 3
- Getting Started ····· 4
- Play Modes ····· 5-7
  - Free Play Mode ····· 5
  - Auto-Play Mode ····· 6
  - Fingering Chart ····· 7
- Troubleshooting ····· 8
- Specifications ····· 9


Instruction Manual & Sheet Music ▸
https://stores.horiusa.com/nsx-261/manual/

Caution


Parents / Guardians:
Please read the following information carefully.

- This product is for indoor use only.
- Use this product at room temperatures between 0 and 40°C (32 and 104°F).
- This product contains small parts. Keep away from children under 3 years old.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Keep the product away from dusty or humid areas.
- Do not use this product if it is damaged or has deteriorated.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or in direct sunlight. Overheating may cause a malfunction.
- Do not touch the USB Type-C™ port, 3.5 mm jack, or battery spring terminals with your fingers or metal objects. Doing so may cause injury or malfunction.
- Do not apply strong impact or weight on the product.
- Do not disassemble, modify or attempt to repair this product.
- To clean this product, use a soft, dry cloth. Do not use chemicals such as benzene or thinner.
- Do not insert the USB plug into socket-outlets.
- Retain the packaging and instruction manual, as they contain important information.
- Please retain this instruction manual for your future reference.
- The normal function of the product may be disturbed by strong electro-magnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual (Getting Started). In case the function does not resume, please relocate to an area which does not have electro-magnetic interference to use the product.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.
- This product requires AA alkaline batteries. Carefully read and follow all instructions provided with the batteries.
- If the product is used by children, a parent or guardian should read the instruction manual carefully and explain the instructions to the child.
- If you notice smoke, unusual sounds, strange odors, or any other abnormality, immediately remove the batteries and stop using the product. Continued use may result in fire or malfunction.
- This product requires three AA batteries. Insert the batteries with the positive (+) and negative (–) ends facing in the correct directions.
- Do not use rechargeable batteries. Doing so may cause the product to malfunction.
- Do not mix old and new batteries or batteries of different brands, types, or sizes. Differences in battery performance may cause leakage, overheating, rupture, or fire, resulting in injury or malfunction. Always replace all batteries with new ones.
- If the battery leaks, stop using the product immediately. Do not touch any leaking fluid.
- If battery fluid gets into your eyes, immediately rinse them with plenty of clean water and seek medical attention. If it gets on your hands or body, rinse the affected area thoroughly with water.
- Do not hold the product close to your ear while using it at high volume. Sudden loud sounds may damage your hearing. Always use the product at an appropriate volume.
- Do not place this product in your mouth.
- Remove the batteries when storing the product for an extended period without use.

Contents

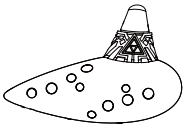

Electric OCARINA OF TIME × 1




Stand × 1



Quick Start Guide × 1

Layout and Features

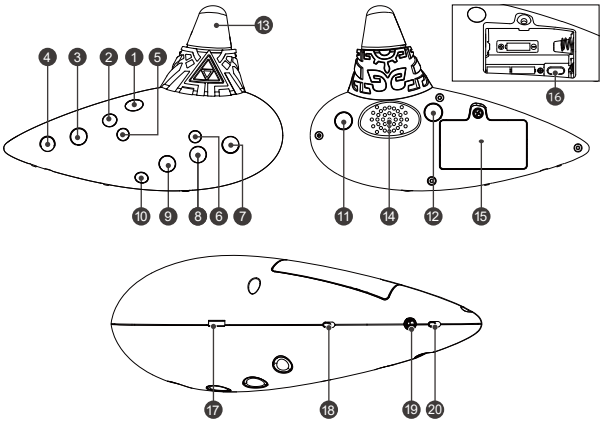


1. Touch Buttons 1
2. Touch Buttons 2
3. Touch Buttons 3
4. Touch Buttons 4
5. Touch Buttons 5
6. Touch Buttons 6
7. Touch Buttons 7
8. Touch Buttons 8
9. Touch Buttons 9
10. Touch Buttons 10
11. Touch Buttons 11
12. Touch Buttons 12
13. Play Button
14. Speaker
15. Battery Cover
16. USB Type-C™Port
    Note: The USB Type-C™ port is not intended for charging. Please use the USB Type-C™ port only when connecting the device to a PC for firmware updates.
17. Volume Control Dial
    Use the dial to adjust the speaker and headphone volume.
18. Power Switch
19. Headphone Jack
    Connect earphones or headphones to the 3.5 mm jack to play without disturbing others.
20. Mode Switch

Getting Started

1 Loosen the screw and remove the battery cover on the back of the product.


*Use a commercially available #2 Phillips screwdriver. Using a different size may strip the screw head.

*The screw is structured so that it does not detach from the battery cover to prevent loss.

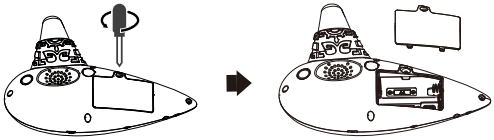


2 Open the battery cover and insert three AA alkaline batteries, negative (-) ends first. Then close the cover and securely tighten the screw.

*When removing the batteries, lift them out from the positive (+) ends first.

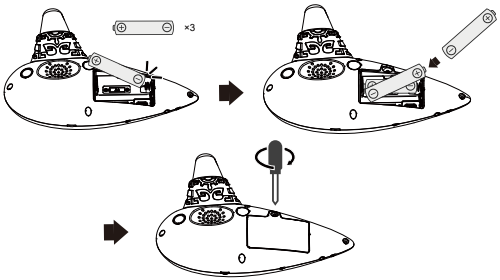


3 After turning the power switch ON, do not touch any of the Touch Buttons **for 3 seconds.** The Touch Buttons will be calibrated.
After calibration is complete, adjust the volume using the volume control dial.

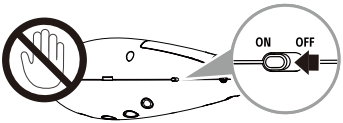


Play Modes

This product supports the voice recognition feature of the Nintendo Switch™ 2 software "The Legend of Zelda: Ocarina of Time."


*When using this product with the Nintendo Switch™ 2 sound recognition feature, keep it within 5.0 meters of the console.

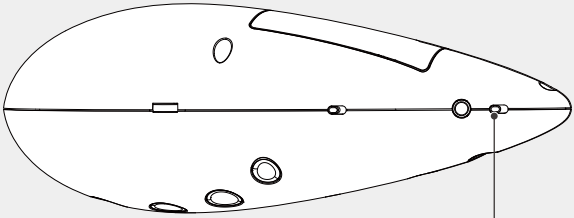

Mode Switch Set the mode switch to your desired mode.

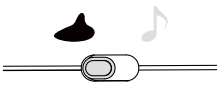

Free Play Mode

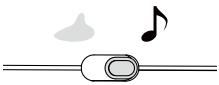


Auto Play Mode

Free Play Mode

Hold down the play button and the Touch Buttons with your fingers to play like a real ocarina.

*Please refer to the fingering chart for finger placement.

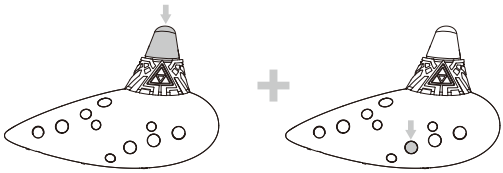


Fingering Chart ⇒ p.7


Auto Play Mode

While holding down the play button, touch one of the Touch Buttons to play its assigned song.

*Touch only the button assigned to the song you want to play. The song will not play if you touch another Touch Button at the same time.

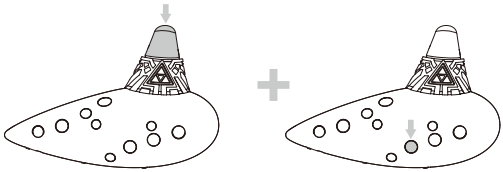

Button Layout for Auto-Play Mode

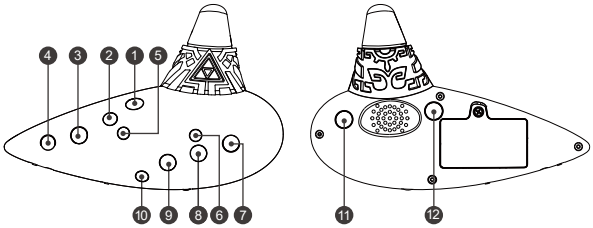

1. Zelda's Lullaby
2. Song of Time
3. Sun's Song
4. Song of Storms
5. Epona's Song
6. Saria's Song
7. Minuet of Forest
8. Bolero of Fire
9. Serenade of Water
10. Requiem of Spirit
11. Nocturne of Shadow
12. Prelude of Light

Fingering Chart

●: Touch the button. ○: Lift your finger off the button.




Fingering patterns marked with "" can be used after updating the firmware. The correct notes may not sound before the update.

Update the firmware here

https://stores.horiusa.com/nsx-261/

Soprano Scale Fingering Chart

*These fingerings are unique to the Electric Ocarina of Time.

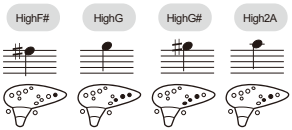

Troubleshooting

① No sound is produced, or the sound does not play as intended.

If this product is left unoperated for a while, it will automatically enter sleep mode to protect the batteries. Pressing the play button will wake it from sleep mode.

This product calibrates the touch sensors after the power is turned on. After turning on the power, leave the product untouched for approximately 3 seconds before using it again.

② A sound other than the performance was produced.

This product sounds a warning beep during use when the remaining battery power becomes low. A warning beep will also sound if the power is turned ON when the battery level is low. If the warning beep sounds, please replace the batteries with new AA alkaline batteries.

③ The playing cannot be operated as expected.

You may be accidentally touching another Touch Button. Make sure your fingers are touching only the buttons needed for the notes you want to play.

④ The product does not work correctly, or the volume is too low.


Use AA alkaline batteries. Other battery types may have a shorter battery life or cause the product to malfunction. Adjust the volume control dial and check whether sound is produced.

Need help with this product?
Please visit this website for support.


https://stores.horiusa.com/nsx-261/support/

Specification

0.32 lbs / 145 g (excluding batteries)

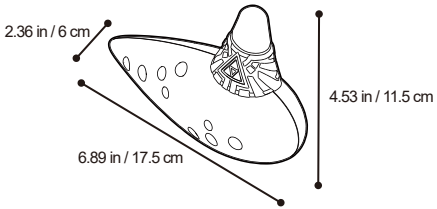

0.05 lbs / 23 g

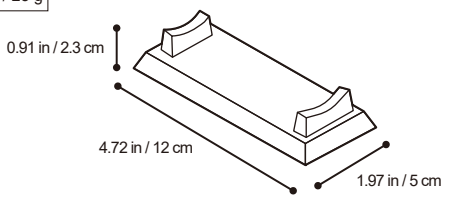

CAUTION:
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THE FCC WANTS YOU TO KNOW
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

CAN ICES-003(B) / NMB-003(B)
This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Simplified Declaration of Conformity
Hereby, HORI declares that this product is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://horieurope.com/consumer-information/

For UK:
Hereby, HORI declares that this product is in compliance with the relevant statutory requirements. The full text of the declaration of conformity is availableat the following internet address: https://horieurope.com/consumer-information/

PRODUCT DISPOSAL INFORMATION
Where you see this symbol on any of our electrical products or packaging,it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

HORI warrants to the original purchaser that our product purchased new in its original packaging shall be free of any defects in both material and workmanship for a period of one year from the original date of purchase. If the warranty claim cannot be processed through the original retailer, please contact HORI customer support.

For customer support in North America and Latin America, please use our customer support form:
https://stores.horiusa.com/support/

For customer support in Europe, please email info@horiuk.com

Warranty Information:
For North America, LATAM, Australia:
https://stores.horiusa.com/policies/

For Europe & Middle East:
https://horieurope.com/policies/

Actual product may differ from image.
The manufacturer reserves the right to change the product design or specifications without notice.
USB-C is a registered trademark of USB Implementers Forum.
HORI and HORI logo are registered trademarks of HORI.
All other trademarks are the property of their respective owners.
© Nintendo. Nintendo Switch is a trademark of Nintendo.